How to upgrade NVR?

Step_1:

I

01 please prepare a USB flash;



02 please format your USB flash to FAT32;

ormat USB Disk (H:)	USB Disk (H:) Properties
Capacity:	General Tools Hardware Sharing
3.07 GB	Sa
ile system	
FAT32	Type: Local Disk
location unit size	File system: FAT32
Default allocation size	Used space: 4,096 bytes 4.00 KB
	Free space: 3,291,852,800 bytes 3.06 GB
ordine faner	Capacity: 3,291,856,896 bytes 3.06 GB
Format options	
Quick Formati Enable Compression Create an MS-DOS startum disk	Drive H Disk Cleanup
Start Clore	
<u>Start</u> <u>C</u> lose	OK Cancel Apply

03 Copy the upgrade file to root folder of the USB falsh;



Step_2:

01 plug your USB fash into DVR; click (mainmenu -- Advance Option -- Disk) to check usb and upgrade;



Disk	User	Upgrade	Preview
16			
X			
tuto Mointoin			

0

12

02 Click Upgrade and select the right upgrade file to upgrade ;

Device Upgrade						
No.	Nator	Size	Date			
0	update_nvr3520D.tgz	19373.146 KB	2014-04-18			
	Refresh Upgrade	Canc	æ			
	Device Upgrade					
	1		2			
No. 0	Name update_nvr3520D.tgz	5124 19373.146 KB	Dote 2014-04-18			
Upgrading, do not power off!						
	Refresh Upgrade	Cance	4			
D TICE:Don`t 3 After upg Restore D	remove your USB falsh and power off while rade , NVR will auto restart; efault;(mainmenu sys setup default)	DVR is upgrading	1			
	Restore Defaule					
	Colot all					
	Selet all					
	General Settings					
	User Manage					
	Channel Configuration					
	Record Setup					
	Alarm Input					
	Confirm	Cancel				

Step3: 01 uninstall IE OCX and re install.



02 Reinstall NVR OCX and login;

O Logout	Advance Setup	🗙 Basic Setup	LiveVideo		1
				•	System
Version				-	Channel
Serial Number	1BI53D46BK15CLP	152		O	Record
Model Number	16-CHANNEL			1	
Software Version	2.1.5				
101010				-	
Date	Jun 30 2014				
					Storage

Finish.