



How to upgrade NVR?



1 Login NVR via IE in LAN;

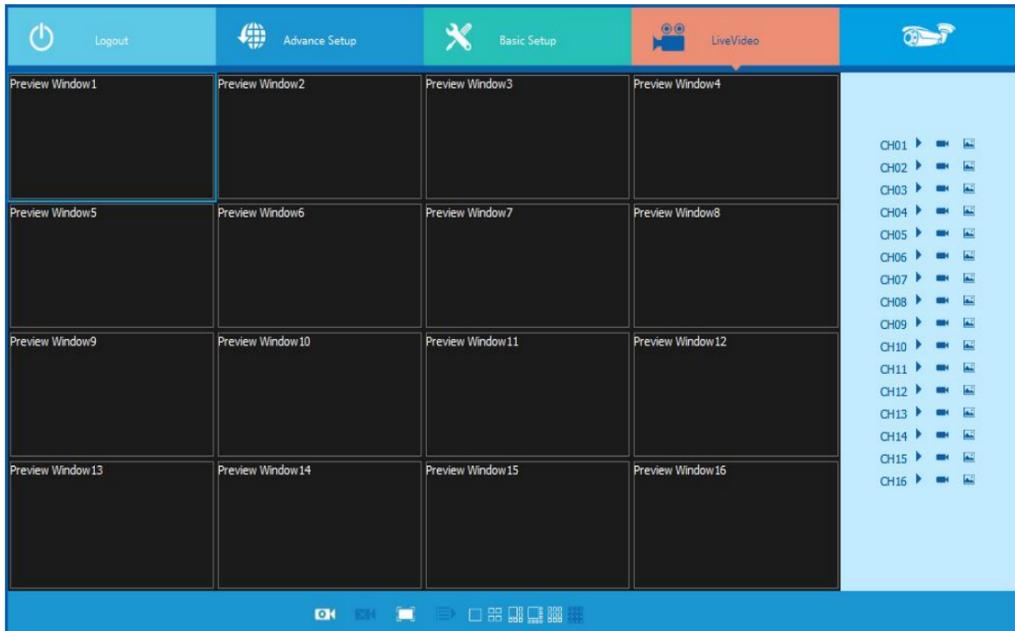

2 Click Basic Setup -- Device Manage , choose upgrade file;

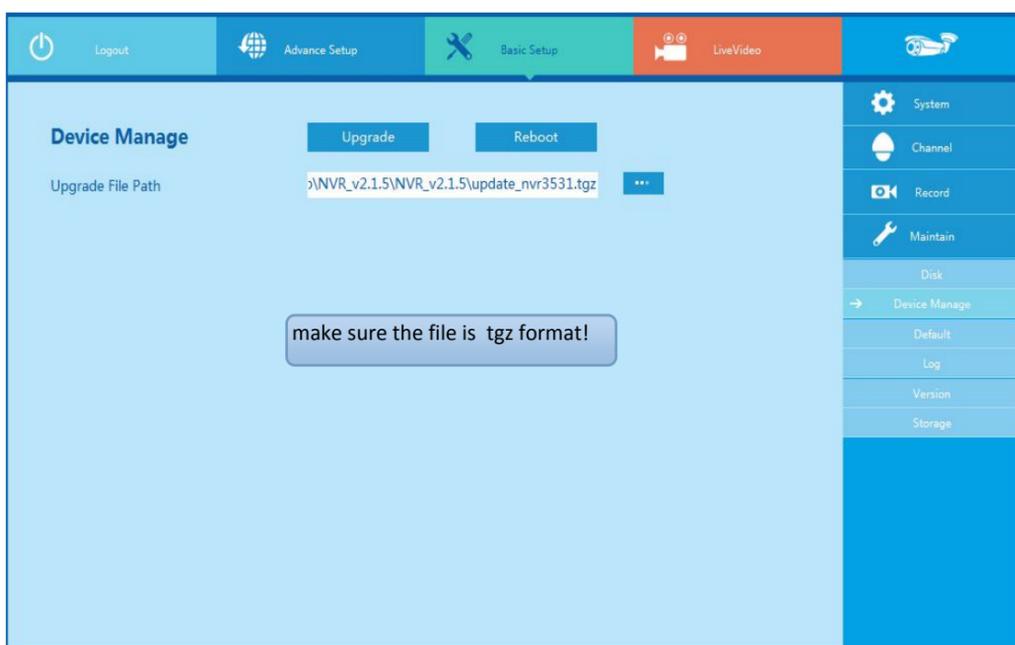

3 Click upgrade and wait about 1 minute ;

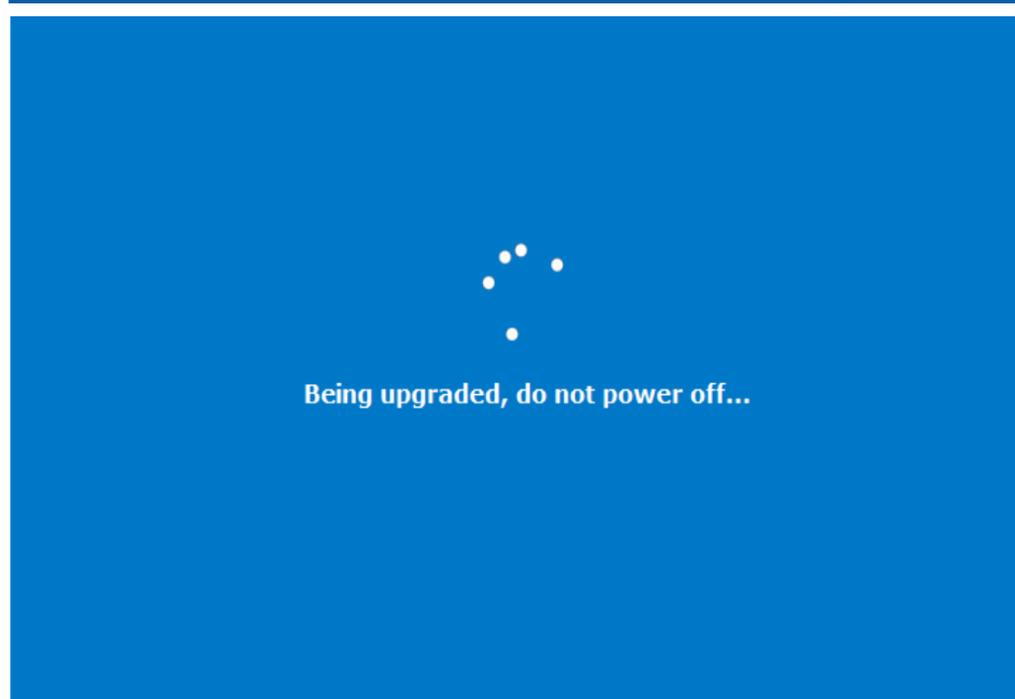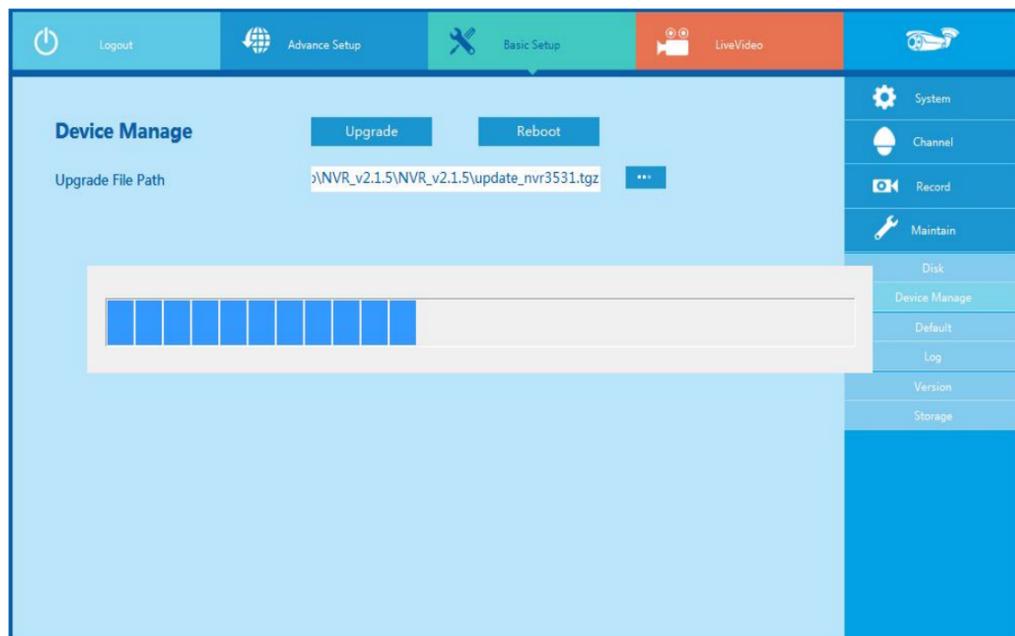


4 Close IE and uninstall the NVR OCX;



Click start , find NVR OCX and uninstall it.or you can uninstall it through control plan;

6 Relogin NVR , download new OCX and login;

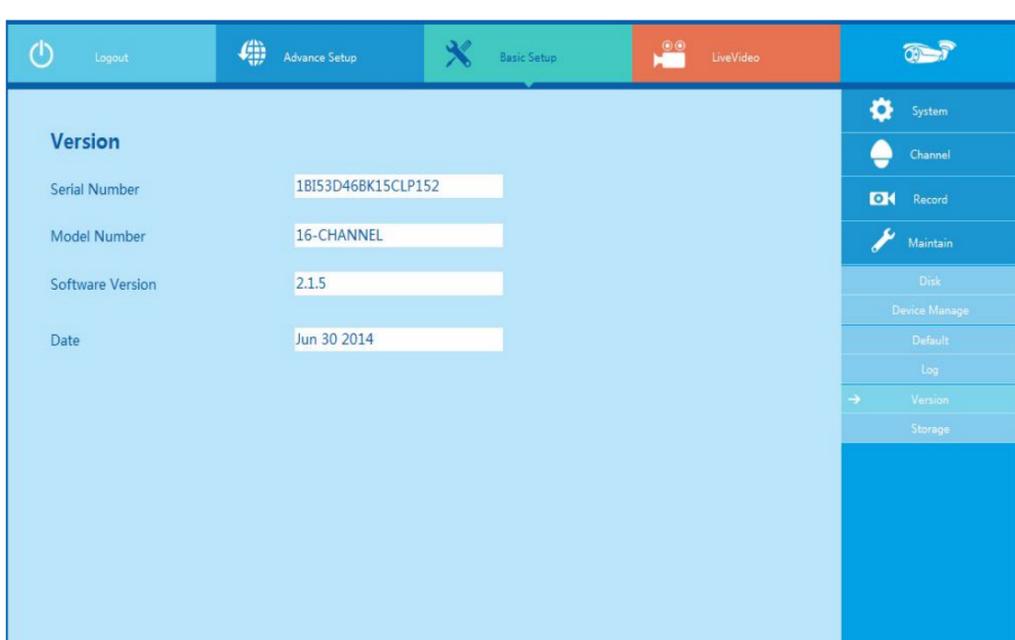

7 Finish.